


EXTREMEAIR WIRING DIAGRAM

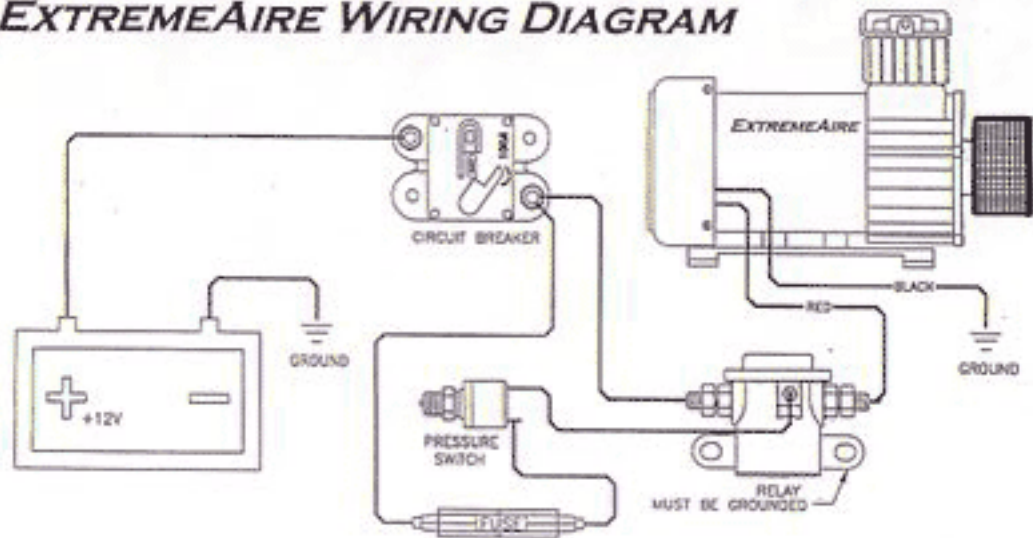

- Always use a circuit breaker or at least a fuse of 60 amps.
- An on/off toggle switch is recommended in line with the pressure switch. The compressor can be manually turned off if the system ever develops a leak or the vehicle is left unattended.
- If not using a pressure switch, install the toggle switch to turn relay on and off. The ignition "on" wire would be a good choice for power so the ExtremeAir will run only if the vehicles motor is running.
- For electrical hook up to the battery of under 2 feet, 10 gauge wire is sufficient. For longer runs, us heavier gauge wire to avoid current loss and damage to motor